

Raspberry Pi: Add TFT Screen

Batocera works fine with screen that are connected through the Pi's HDMI port. But some extra work is required to make it work with screens connected to the DPI or SPI ribbon/GPIO pins. Batocera already supports a few (undocumented) screens but more likely than not your screen isn't supported yet. Some extra effort is required to get this working:

SPI/GPIO displays

1. Acquire a compiled build of your drivers for your intended Raspberry Pi. If only the source is available, you may need to compile it yourself on the Pi. This is most often only possible on Raspberry Pi OS. Some displays may require you to compile with the option `DUSE_DMA_TRANSFERS=OFF` before they'll start working.
2. If necessary, copy the overlay file(s) (usually the *.dts and *.dtb files) for your drivers to `/boot/`.
3. Go to `/boot/config.txt` and edit the line applicable to your display (usually mentioned in the driver's documentation, some displays require you to remove all dtoverlays). For example:

```
dtoverlay=waveshare32b,rotate=90,speed=22000000,fps=60
```

4. Boot up Batocera on the Pi, access it via SSH and execute the driver binary. If the stars align and you are successful, you'll get an image on your screen:



5. Add the command line you used to start the drivers to [a custom early boot script](#). If this doesn't work, try using [the later post-boot custom script](#) instead (you'll lose out of seeing the splash screen if you use this method).

From:

<https://wiki.batocera.org/> - **Batocera.linux** - Wiki

Permanent link:

https://wiki.batocera.org/add_tft_screen_rpi_only?rev=1634015356

Last update: **2021/10/12 05:09**

