
Required hardware



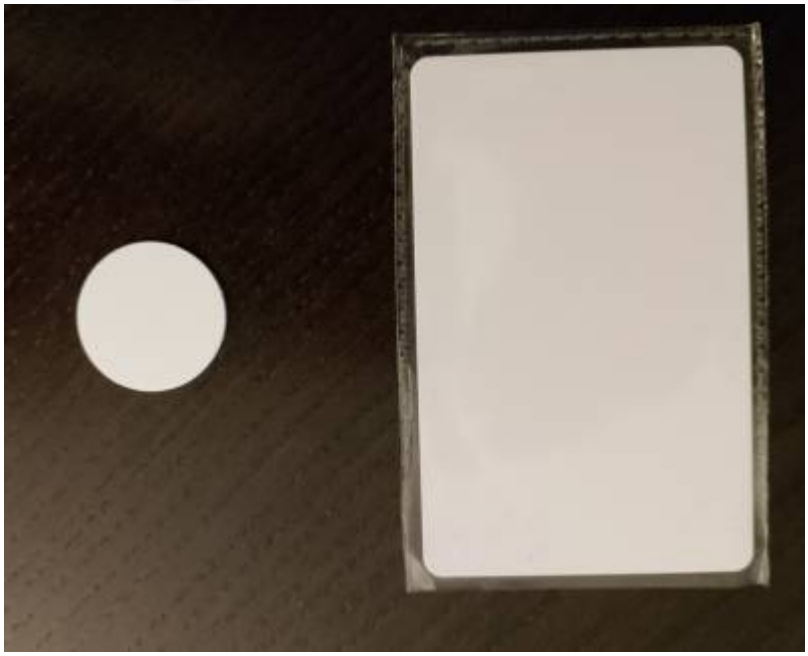


Available software

1. Integrated batocera nfc service
2. Zaparoo nfc service

The itegrated batocera nfc service supports only pn532 readers. THe Zaparoo nfc service supports more hardware (see https://zaparoo.org)

Installation


Plug the nfc reader to batocera

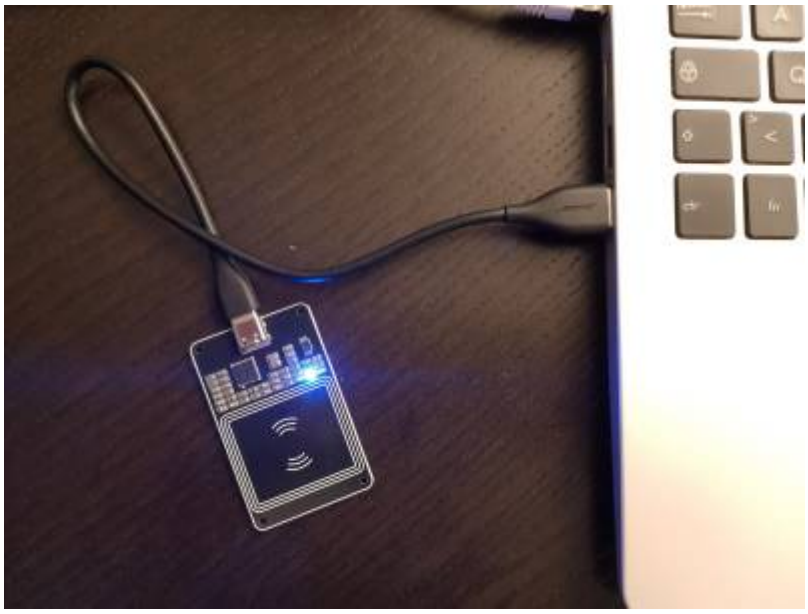

Start the nfc service



Write the name of a card on a nfc tag

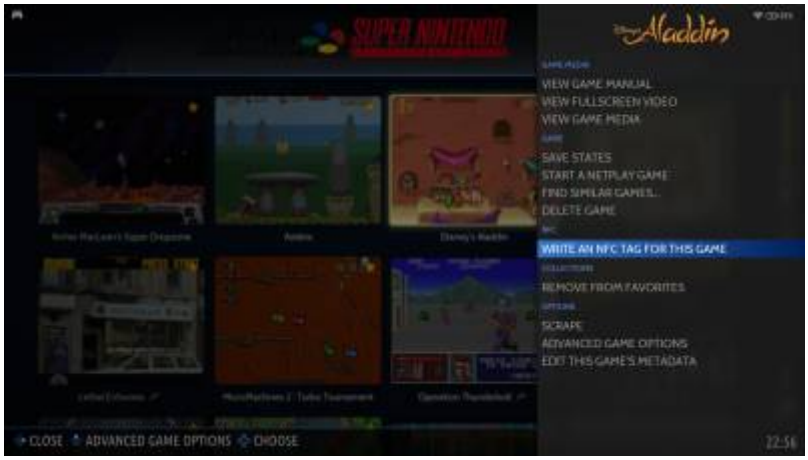



Usage

From:
https://wiki.batocera.org/ - **Batocera.linux - Wiki**

Permanent link:
https://wiki.batocera.org/hardware:nfc?rev=1770330868

Last update: **2026/02/05 22:34**